



Tamper-Proof Case

Items



Left piece



Right piece




Allen
wrench

Compatible Models


DR650S-1CH, DR650S-2CH,
DR650S-2CH IR, DR650S-2CH TRUCK,
DR550GW-1CH, DR550GW-2CH,
DR650GW-1CH, DR650GW-2CH

Installation

1. Install a compatible BlackVue dashcam model.
2. Slide the **left piece** over the left end of the dashcam and position it around the mounting bracket.

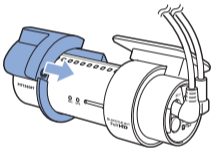

3. Align the **right piece** with the mounting bracket and slide it onto the right end of the dashcam.
- The right piece is printed with the BlackVue logo.

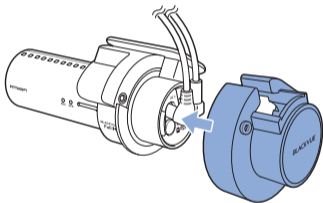

4. Push the two pieces together and use the Allen wrench to tighten the two screws.

Case type

- **BTC-1A:** Regular type suitable for sedans, SUVs, sports cars, etc. (windshield angle of 20° – 60° with the horizontal)
- **BTC-1B:** Vertical windshield type suitable for trucks, buses, vans, etc. (windshield angle of 60° – 90° with the horizontal)

 facebook.com/BlackVueOfficial

www.blackvue.com

Made in Korea